


DYNA BF® Application Head

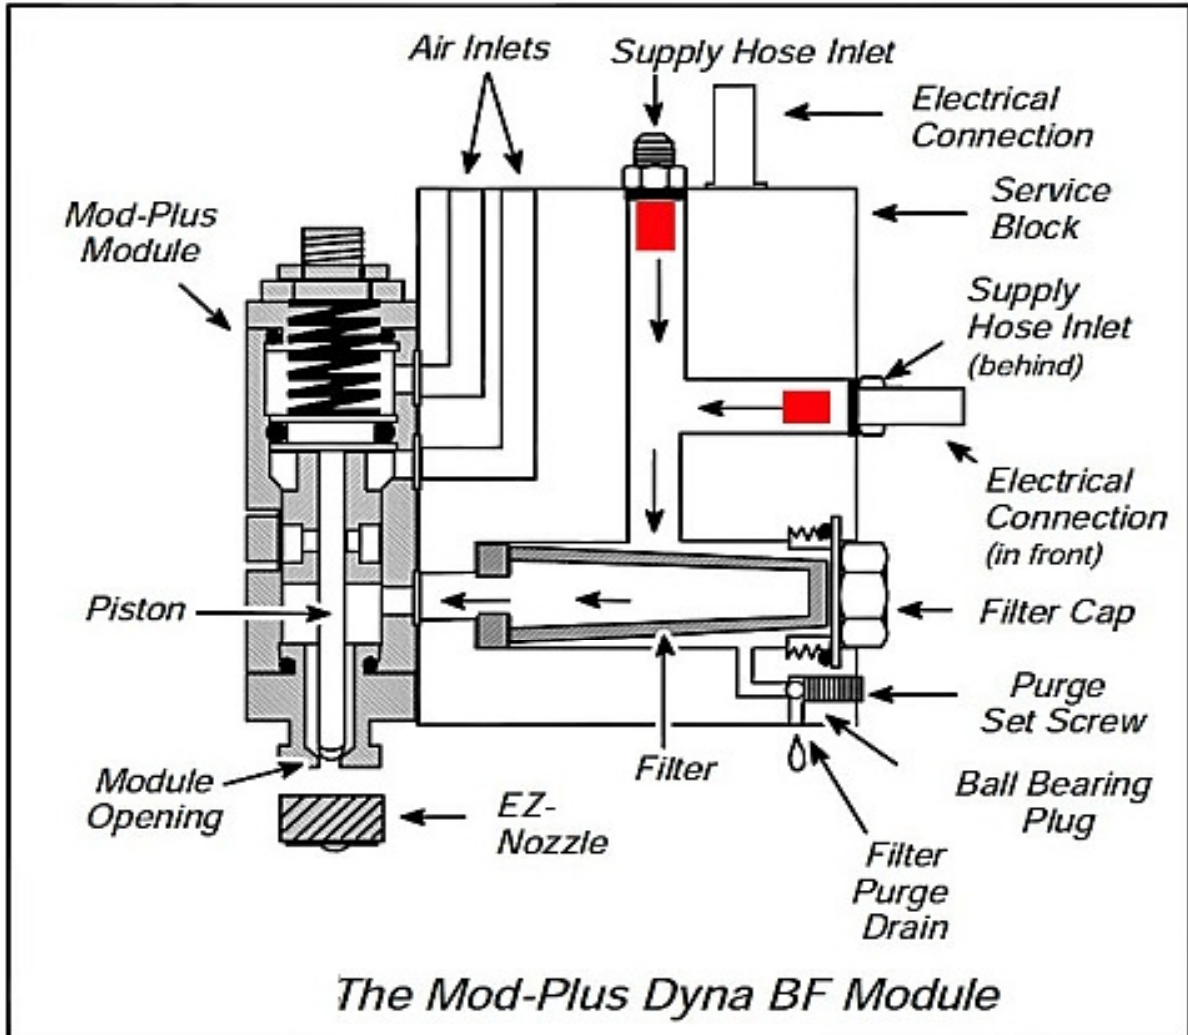

The heated adhesive supply hose may be connected at the rear of the service block or at the top. Adhesive flows from the hose into and through the channels within the block to the module. Air pressure opens the adhesive valve, allowing adhesive to flow through the module's nozzle when the valve is open.