



## WORKING PRINCIPLE - CONFIGURATION



### ■ COMPRESSOR


COMPRESSED AIR IS DIRECTED VIA AIR FILTER TO PRESSURE VESSEL



### ■ PRESSURE VESSEL

COMPRESSED AIR PASSES THE LIQUID OUT... TO:

■ ... TO VALVES, GLUE GUNS, EQUIPMENTS, ETC:

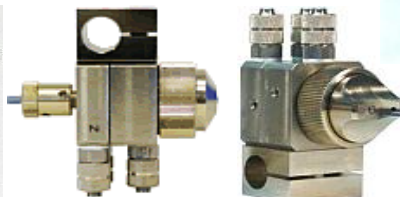

**PAKARTE LLC**  
Mob +372 5656 9482  
pakarte@pakarte.com  
www.pakarte.com